

# IXIO FAMILY




Download the BEA DECODER app for a quick overview of settings



Activation and safety sensors for automatic sliding doors



## PRODUCT FAMILY


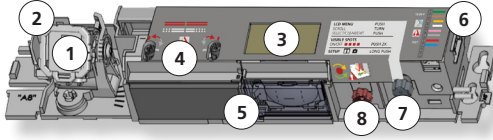


**IXIO-DT1:** activation and safety for pedestrian doors


**IXIO-DT1 INDUSTRIAL:** activation and safety for industrial doors

**IXIO-ST:** safety for pedestrian doors

**IXIO-ST INDUSTRIAL:** safety for industrial doors

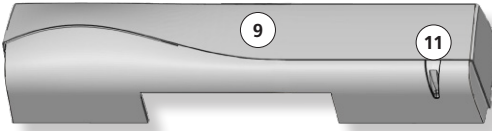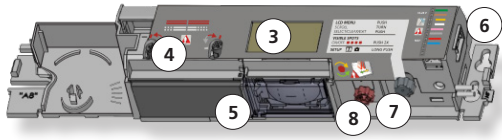

**IXIO-DT1 V:** IXIO-DT1 + camera cover accessory

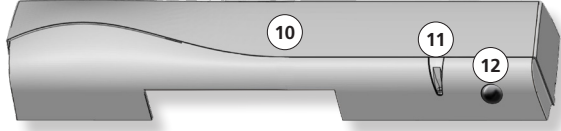

- |                                 |                                      |
|---------------------------------|--------------------------------------|
| 1. radar antenna (wide field)   | 7. main adjustment knob              |
| 2. radar antenna (narrow field) | 8. AIR curtain angle adjustment knob |
| 3. LCD                          | 9. IXIO-DT1 / IXIO ST cover          |
| 4. AIR curtain width adjustment | 10. IXIO-DT1 V cover                 |
| 5. AIR lenses                   | 11. LED                              |
| 6. main connector               | 12. camera                           |

## ACCESSORIES

All IXIOs




10IMB: Bracket accessory

All IXIOs (except DT1 V)




10ICA: Ceiling accessory

All IXIOs (except DT1 V)



10IRA: Rain accessory

All IXIOs (except DT1 V)




35.1286: black cover  
35.1302: white cover  
35.1303: silver cover

All IXIOs




10CDA: Curved door accessory

All IXIOs



10IXIOSPACER: Spacer

All IXIOs



10.1279: Camera cover accessory

# READ BEFORE BEGINNING INSTALLATION/PROGRAMMING/SETUP

## LED SIGNAL



(green)  
Motion detection (DT1 sensors) / AUX (ST sensors)



(red)  
Presence detection



LED flashes



LED flashes x times



LED flashes red-green



LED flashes quickly




LED is off


## INSTALLATION



The sensor should be mounted securely to avoid extreme vibrations.

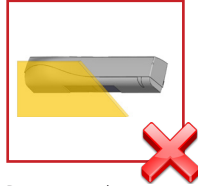

Do not cover the sensor.

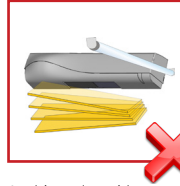


Avoid moving objects and light sources in the detection field.



Avoid highly reflective objects in the infrared field.

*This device can be expected to comply with Part 15 of the FCC Rules, provided it is assembled in exact accordance with the instructions provided with this kit. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.*

## MAINTENANCE

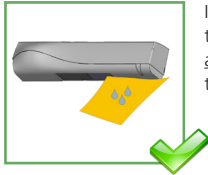


It is recommended to clean the optical parts at least once a year or more if required due to environmental conditions.



Do not use aggressive products to clean the optical parts.


## SAFETY

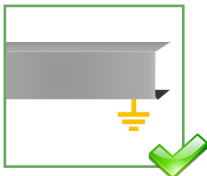


The door control unit and the header cover profile must be correctly grounded.



Only trained and qualified personnel are recommended for installation and setup of the sensor.

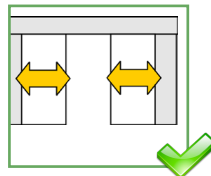

Following installation, always test for proper operation (according to ANSI 156.10) before leaving the premises.

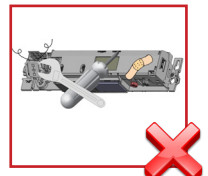


The warranty is invalid if unauthorized repairs are made or attempted by unauthorized personnel.


# READ BEFORE BEGINNING INSTALLATION/PROGRAMMING/SETUP

## HOW TO USE THE LCD


### DISPLAY DURING NORMAL FUNCTIONING



Activation impulse Safety



Negative display = active output




To adjust contrast, push and turn the gray button simultaneously.

*During normal function only.*

### FACTORY VALUE VS. SAVED VALUE



displayed value = factory value



displayed value = saved value

### NAVIGATING IN MENUS



Push to enter the LCD menu



Enter password if necessary

*Not during the first minute after power-on of the sensor.*



Select your language before entering the first LCD menu.

*During the first 30 seconds after power-on of the sensor or later in the Diagnostics menu.*



Scroll menu items



Select **Back** to return to previous menu or display.



Select **More** to go to next level:  
- basic settings (MENU 1)  
- advanced settings (MENU 2)  
- diagnostics (MENU 3)



### CHANGING A VALUE



Scroll menu up/down




Push to select parameter



current value is displayed



Scroll values up/down



more values are displayed






Push to save new value



new value is displayed

### CHANGING A ZIP CODE

See application note on ZIP CODE (76.0024)



Validate the last digit in order to activate the new ZIP code:

- v = valid ZIP code (values will be changed accordingly)
- x = invalid ZIP code (no values will be changed)
- v/x = valid ZIP code, but from a different product

*\*only available values will be changed\**

### VALUE CHECK WITH REMOTE CONTROL




Pressing a parameter symbol on your remote control displays the saved value directly on the LCD screen. Do not unlock first.

# 1 MOUNTING & WIRING

Using the provided mounting template, mount the sensor, ensuring that the bottom of the sensor is within 2 inches of the bottom of the door header.

Route the harness using the harness clip as shown in the exploded view of the mounting illustration.

## MOUNTING

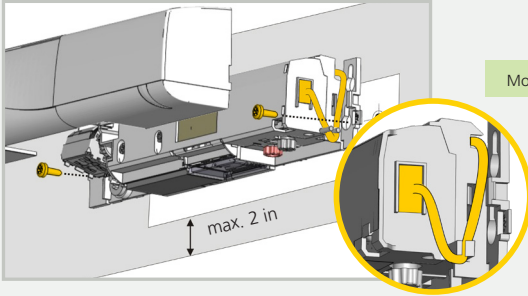

Mounting is compatible with the WIZARD.




Sensor connectivity (power and relays) must utilize only the supplied harness.

Sensor power (and camera power if using the DT1 V) must be supplied from a Class 2 supply source limited to 15 W.

Sensor is intended to be monitored for proper operation by the door operator or system.

Harness shall be routed separated from any Mains or non-Class 2 voltage cable for correct operation or shall be rated for the Mains voltage, and suitable protection and routing means shall be used according to National and Local Codes to prevent damage to the harness.


## WIRING

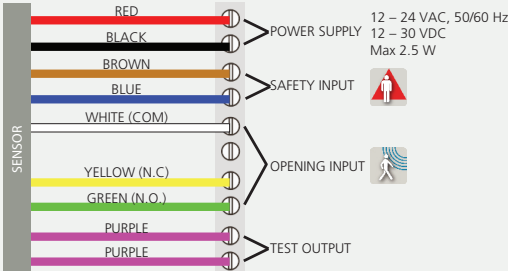

\* Output status when sensor is operational.

\*\* The sensor LED will briefly flash RED during monitoring communication with door control. This indicates that external monitoring is functional. Monitoring functionality must be active on the sensor and monitoring wires must be properly connected to the door control.

## CAMERA HARNESS FOR DT1 V

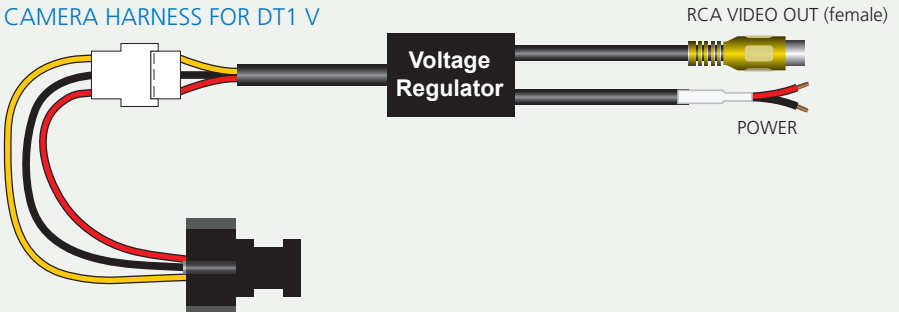


## 2 RADAR OPENING IMPULSE FIELD (DT1 SENSORS ONLY)


The size of the detection field varies according to the mounting height of the sensor.

The following graphics are representations – not default settings.


### ANGLE

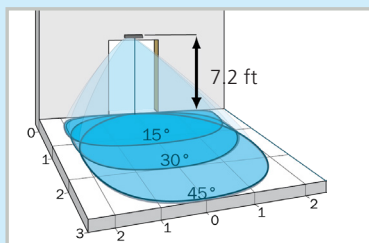


from 15° to 45°, default 30°

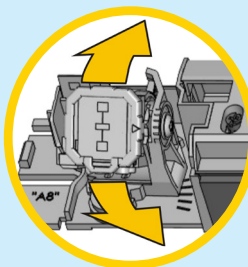

field size: 9  
immunity: 2

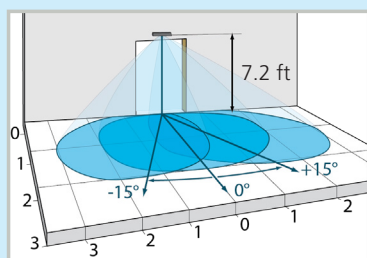


from -15° to 15°, default 0°

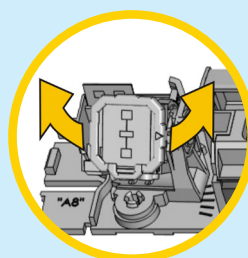


field size: 9  
immunity: 2


### WIDTH

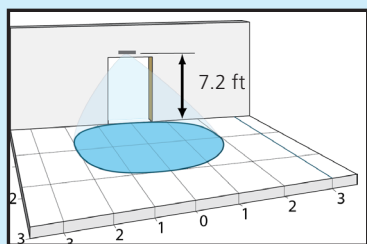


13' x 6'6" (wide)

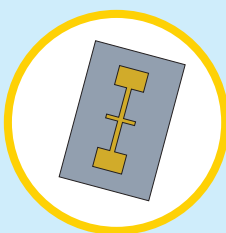

field size: 9  
immunity: 2

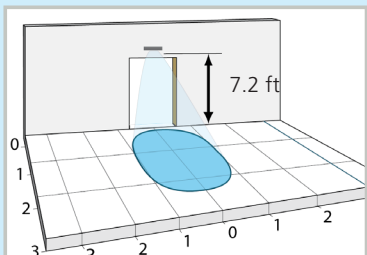

6'6" x 8' (narrow)

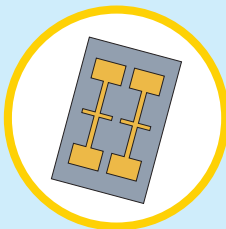


field size: 9  
immunity: 2

1 x 1 grid is approximately 3.28 ft x 3.28 ft.


### 3 INFRARED SAFETY FIELD

#### ANGLE

Activate the visible\* spots to verify the position of the AIR curtain.

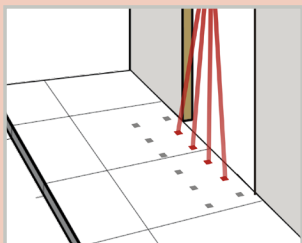


If necessary, adjust the AIR curtain angle (from -7° to 4°, default 0°).




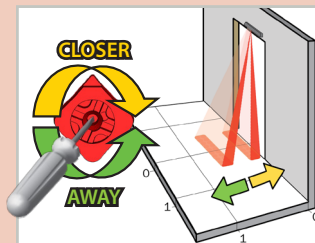


\* Visibility depends on external conditions. When spots are not visible, use the Spotfinder to locate the curtains.


\*\* The distance between the inner curtain of the inside door sensor and the inner curtain of the outside door sensor should always be smaller than 8 in.

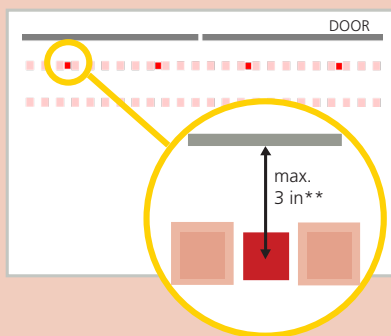

#### WIDTH

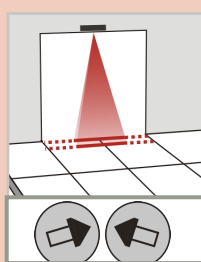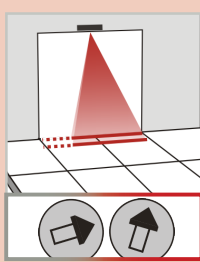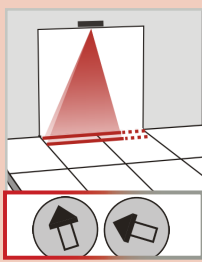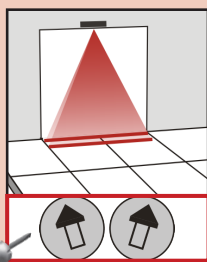

Part of the detection field can be masked to reduce its width. The arrow position determines the width of the detection field.

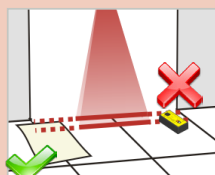

Always verify the actual detection field width by walk-testing according to ANSI 156.10 guidance.

Additional adjustments are possible by LCD or remote control (see OVERVIEW OF SETTINGS).

The size of the detection field varies according to the mounting height and the settings of the sensor. The full door width must be covered.

Mounting height	Detection width
6' 6"	6' 6"
7' 3/16"	7' 3/16"
8' 3/16"	8' 3/16"
9' 13/16"	9' 13/16"
11' 6"	11' 6"

## 4 SETUP

Set up the sensor using either push-buttons or the remote control.



STEP OUT OF THE INFRARED FIELD!



### SETUP 1 (QUICK)

either hold the knob for 2 seconds, or use the remote control buttons as specified



+



### SETUP 2 (ASSISTED)

test of full door cycle + reference picture



+



+



TEST THE PROPER OPERATION OF THE INSTALLATION BEFORE LEAVING THE PREMISES!



## OVERVIEW OF SETTINGS

highlighted blue = DT sensors only

highlighted red = ST sensors only



	0	1	2	3	4	5	6	7	8	9	
Back More											
RAD: FIELD SIZE	small	>	>	>	>	>	>	>	>	large	▶
AIR: WIDTH											see note 1
AIR: OUTPUT		DeEner/NO Energ/NC	Energ/NC DeEner/NO	Energ/NC Energ/NC	DeEner/NO DeEner/NO						see note 2
TEST	off	on									see note 3
More Back											
Back More											
RAD: FIELD SIZE	small	>	>	>	>	>	>	>	>	large	▶
RAD: IMMUNITY		low	>	>	>	>	>	>	>	high	◀
RAD: DIRECTION	off	bi	uni	uni MTF	uni away						see note 4
RAD: HOLD TIME	0.5 s	1 s	2 s	3 s	4 s	5 s	6 s	7 s	8 s	9 s	⏸
RAD: REENTRY	small	>	>	>	>	>	>	>	>	large	◀▶
RAD: OUTPUT		DeEner/NO Energ/NC	Energ/NC DeEner/NO	Energ/NC Energ/NC	DeEner/NO DeEner/NO						see note 2
AIR: IMMUNITY		normal	enhanced					mode B			🔔
AIR: WIDTH											see note 1
AIR: NUMBER		1	2								B↔
AIR: PRESENCE TIME			30 s	1 min	2 min	5 min	10 min	20 min	60 min	infinte	🕒
AIR: FREQ		A	B								DD
AIR: OUTPUT		DeEner/NO Energ/NC	Energ/NC DeEner/NO	Energ/NC Energ/NC	DeEner/NO DeEner/NO						see note 2
TEST	off	on									see note 3
REDIRECTION	motion	motion or presence									see note 6
REDIRECTION	presence	aux + presence									see note 7
FACTORY RESET									full reset	partial reset	see note 8

ZIP CODE

ID # all parameter settings in zipped format (see application note on ZIP CODE – 76.0024)

CONFIG P/N unique ID-number

SOFT P/N

ERROR LOG

AIR: SPOTVIEW last 10 errors + day indication

AIR: C1 ENERG view of spot(s) that trigger detection

AIR: C2 ENERG signal amplitude received on curtain

signal amplitude received on curtain 2

POWERSUPPLY

OPERATINGTIME supply voltage at power connector

RESET LOG power duration since first startup

PASSWORD delete all saved errors

ADMIN LCD and remote control password (0000= no password)










enter code to access admin mode



**NOTES**







Note 1	Always additionally adjust the arrow position on the sensor with a screwdriver.
Note 2	DeEner: De-Energized relay Energ: Energized relay NO: normally open NC: normally closed
Note 3	The sensor LED will briefly flash RED during monitoring communication with door control. This indicates that external monitoring is functional. Monitoring functionality must be active on the sensor and monitoring wires must be properly connected to the door control.
Note 4	MTF: motion tracking feature
Note 5	min. value for DIN18650: 1 min min. value for EN16005: 30 s
Note 6	opening output is active in case of: 0 motion detection 1 motion or presence detection
Note 7	0 presence detection on safety input 1 presence detection on safety + auxiliary inputs
Note 8	partial: outputs are not reset

## TROUBLESHOOTING

E1	 ORANGE LED flashes 1x	The sensor signals an internal fault.	Replace sensor.
E2	 ORANGE LED flashes 2x	The power supply voltage is too low/high.	Check power supply voltage in diagnostics menu (menu 3) of the LCD. Check wiring.
E4	 ORANGE LED flashes 4x	The sensor does not receive enough AIR energy.	Decrease the angle of the AIR curtains. Increase the AIR immunity filter. Deactivate 1 curtain.
E5	 ORANGE LED flashes 5x	The sensor receives too much AIR energy.	Slightly increase the angle of the AIR curtains. Decrease the AIR immunity filter.
E8	 ORANGE LED flashes 8x	IR power emitter is faulty.	Replace sensor.
	 ORANGE LED is on	The sensor encounters a memory problem.	Cut and restore power supply. If ORANGE LED illuminates again, replace the sensor.
	RED LED flashes quickly after an assisted setup	The sensor sees the door during assisted setup.	Move the AIR curtains away from the door. Install the sensor as close to the door as possible. If needed, use a bracket assembly. Ensure that the bottom of the sensor is mounted within 2" of the bottom of the door header. Launch a new assisted setup.
		The sensor vibrates.	Check if the sensor is secure.
		The sensor sees the door.	Check position of cable and cover.
	RED LED illuminates sporadically	The sensor is disturbed by external conditions.	Adjust the AIR angle and launch an assisted setup. Increase the AIR immunity filter.
		The sensor is disturbed by rain and/or leaves.	Increase radar immunity filter.
		Ghosting created by door movement.	Change radar field angle.
		The sensor vibrates.	Check if the sensor and door cover is secure. Check position of cable and cover.
	GREEN LED illuminates sporadically	The sensor sees the door or other moving objects.	Remove the objects if possible. Change radar field size or angle.

*troubleshooting continues on the next page*

## TROUBLESHOOTING (cont.)

	The LED and the LCD displays are off	No power to sensor.	Check wiring.
			Check for correct power supply.
	The reaction of the door does not correspond with the LED signal	Incorrect output configuration / wiring.	Check output configuration setting.
			Check wiring.
	The LCD or remote control does not react	The sensor is protected by a password.	Enter the correct password. If you forgot the code, cut and restore the power supply to access the sensor without entering a password during 1 minute.
		Visible External Monitoring / Test Indication LED (red) does not flash	Monitoring installation/ setup error.
		Sensor malfunction.	Verify monitoring (TEST) is ON in the sensor settings.
	Visible External Monitoring / Test Indication LED (red) flashes continuously	Wiring issue.	Replace the sensor.
		Door control not set correctly.	Verify wiring.
	Door cycles open and remains open	Door control monitoring set to Active High.	Verify door control monitoring set to Active Low.
		Safety output is set incorrectly.	Set door control monitoring to Active Low.
			Set the safety output required for the door control.

- IXIO sensors are intended to be used as intended by the manufacturer.
- This device can be expected to comply with Part 15 of the FCC Rules, provided it is assembled in exact accordance with the instructions provided with this kit. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## TECHNICAL SPECIFICATIONS

SENSOR

Supply voltage:	12 – 24 VAC ±10% 12 – 30 VDC ±10%	<i>to be operated from SELV-compatible power supplies only</i>
Power consumption:	< 2.5 W	
Mounting height:	6'6" – 11'6"	<i>local regulations may impact acceptable mounting height (pedestrian applications only)</i>
Temperature range:	Sensor: -13 – 131 °F * 0 – 95% relative humidity, non-condensing	<i>LCD screen is operational from 14 – 131 °F. The sensor may still be programmed in colder temperatures, but with the remote control.</i>
Degree of protection:	IP54	
Noise:	< 70 dB	
Applicable directives:	R&TTE 1999/5/EC MD 2006/42/EC	LVD 2006/95/EC ROHS 2 2011/65/EU

*Specifications are subject to change without prior notice.  
All values measured in specific conditions.*

## TECHNICAL SPECIFICATIONS (cont.)



Detection mode:	<b>DT1 SENSORS:</b> MOTION minimum detection speed: 2 in/s	<b>DT1 &amp; ST SENSORS:</b> PRESENCE typical response time: < 200 ms (max: 500 ms)
Technology:	<b>DT1 SENSORS:</b> Microwave doppler radar Transmitter frequency: 24.150 GHz Transmitter radiated power: < 20 dBm EIRP Transmitter power density: < 5 mW/cm <sup>2</sup>	<b>DT1 &amp; ST SENSORS:</b> Active infrared with background analysis Spot: 2" x 2" (typ) Number of spots: max. 24 per curtain Number of curtains: 2
Output:	<b>DT1 &amp; ST SENSORS:</b> Electromechanical relay (potential and polarity free) Max. contact current: 1 A Max. contact voltage: 30 VDC Adjustable Hold time: 0.5 – 9 s	<b>DT1 &amp; ST SENSORS:</b> Solid-state relay (potential and polarity free) Max. contact current: 400 mA Max. contact voltage: 42 VAC / VDC Hold time: 0.3 – 1 s
Test/Monitoring input:	<b>DT1 &amp; ST SENSORS:</b> Sensitivity: Low: < 1 V High: > 10 V (max. 30 V) Response time on test request: typical < 5 ms	
Norm conformity:	<b>DT1 &amp; ST SENSORS:</b> EN 12978 EN ISO 13849-1:2008 PL «C» CAT. 2 (under the condition that the door control system monitors the sensor at least once per door cycle) IEC 61496-1:2012 ESPE Type 2 EN 16005:2012 Chapter 4.6.8 DIN 18650-1:2010 Chapter 5.7.4 BS 7036-1:1996 Chapter 8.1	

PLEASE KEEP FOR FURTHER USE - DESIGNED FOR COLOR PRINTING

### CAMERA

Voltage regulator (built into wire harness):	6.6 – 36 VDC (±10%) 6 – 28 VAC (±10%)
Operating temperature:	-30 – 60 °C (max. RH: 95%)
Video output:	1.0 (Vp-p) / 75Ω
Image Sensor:	CMOS
Horizontal resolution:	480 TVL
NTSC output:	720 (H) x 480 (V)
Sync system:	Inter-Sync

Frame rate:	30 fps
Minimum illumination:	0.01 LUX
AE control:	auto
Gain control:	auto
Electronic shutter:	1 s ~ 1/10,000s
S/N ratio:	> 50 dB
AWB:	Auto

*Specifications are subject to change without prior notice.  
All values measured in specific conditions.*

### BEA INSTALLATION/SERVICE COMPLIANCE EXPECTATIONS

BEA, the sensor manufacturer, cannot be held responsible for incorrect installations or inappropriate adjustments of the sensor/device; therefore, BEA does not guarantee any use of the sensor outside of its intended purpose.

BEA strongly recommends that installation and service technicians be AAADM-certified for pedestrian doors, IDA-certified for doors/gates, and factory-trained for the type of door/gate system.

Installers and service personnel are responsible for executing a risk assessment following each installation/service performed, ensuring that the sensor system installation is compliant with local, national, and international regulations, codes, and standards.

Once installation or service work is complete, a safety inspection of the door/gate shall be performed per the door/gate manufacturer recommendations and/or per AAADM/ANSI/DASMA guidelines (where applicable) for best industry practices. Safety inspections must be performed during each service call – examples of these safety inspections can be found on an AAADM safety information label (e.g. ANSI/DASMA 102, ANSI/DASMA 107).

Verify that all appropriate industry signage and warning labels are in place.



BEA hereby declares that IXIO sensors are in conformity with the basic requirements and the other relevant provisions of the directives 1999/5/EC, 2006/95/EC and 2006/42/EC.

Notified Body for EC-type inspection: 0044 - TÜV NORD CERT GmbH, Langemarckstr. 20, D-45141 Essen

EC-type examination certificate number: 44 205 12 405836-001

Angleur, October 2014 – Pierre Gardier, authorized representative and responsible for technical documentation

The complete declaration of conformity is available on our website: [www.bea-pedestrian.be](http://www.bea-pedestrian.be)

Only for EC countries: According to the European Guideline 2012/19/EU for Waste Electrical and Electronic Equipment (WEEE)

Tech Support: 1-800-407-4545 | Customer Service: 1-800-523-2462  
General Tech Questions: [Tech\\_Services@beainc.com](mailto:Tech_Services@beainc.com) | Tech Docs: [www.BEAinc.com](http://www.BEAinc.com)

